


Houd je Philips apparaat als nieuw

Vervang je scheerhoofd iedere 2 jaar en laat je apparaat weer 100% presteren.

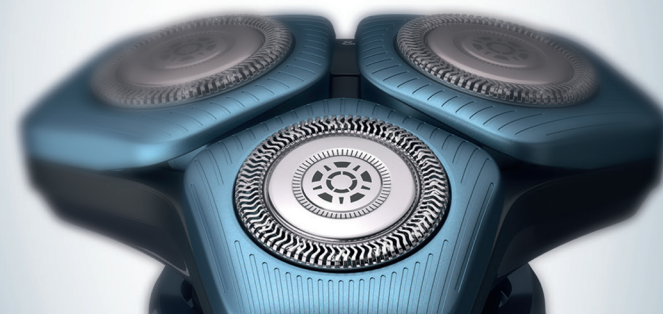

Stap 1 Selecteer je apparaat

OneBlade	Bodygroomer	Series 1000 & 3000	HQ69xx	PowerTouch / AquaTouch	Series 5000	Series 6000	SensoTouch	Series 7000	Series 9000	Series 9000 Prestige
QP2XXX	BG30XX / BG50XX	S1XX / S3XX	HQ69XX	PT/AT 9XX	S5XXX	S66XX	RQ11XX - RQ12XX	S7XXX	S9XXX	SP98XX
					SmartClick	SmartClick	SmartClick	SmartClick	SmartClick	SmartClick

Stap 2 Bevestigen



Stap 3 Vernieuw je scheerhoofd

QP2XX	Face + Body QP6XX	TT2000	SH30	HQ56	HQ9	SH50	SH71	SH50	SH70*	SH71	SH90	SH98



Houd je scheerapparaat als nieuw met de draadloze Quick Clean Pod

Met een druk op de knop reinigen en smeren,
10x effectiever dan water**

** Met reinigingsvloeistof in plaats van water in de cartridge.

Meer dan alleen een scheerapparaat - SmartClick Systeem



Trimmer



Baard-
styler



Reiniger



Neus
trimmen

SmartClick

Passend bij de Shaver Series 5000, 6000, 7000, 9000 en 9000 Prestige.

* Voorheen RQ11/ RQ12